



Removal/Replacement of red "clean" Assembly (266/7/271)

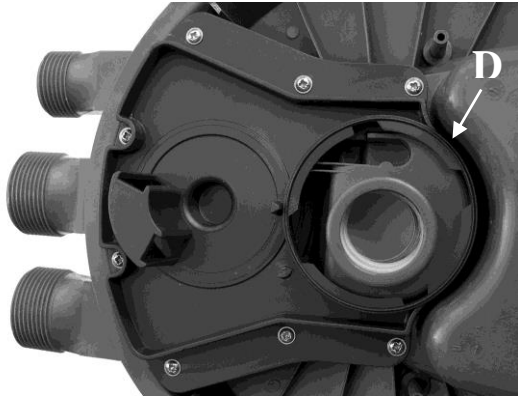

1) Remove eight screws

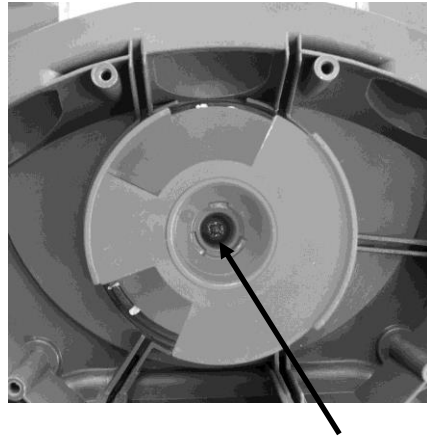


2) Remove centre screw




3) Remove valve assembly



4) Turn over and pull out red clean knob

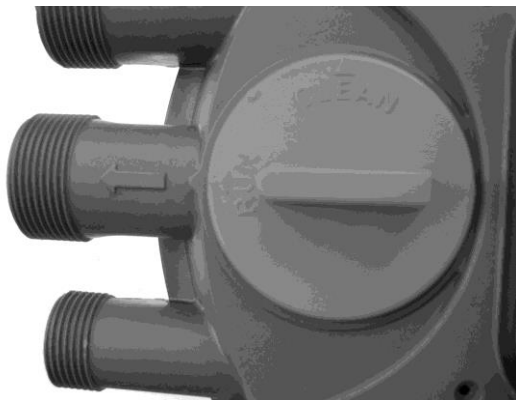

5) Having placed the "O" Rings on the replacement red clean knob (see previous photo), push firmly and evenly into position shown

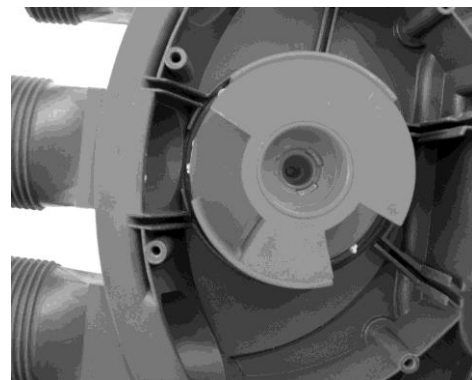

6) Locate the valve assembly in the position shown, replace centre screw and test the clean knob. Replace cover and eight screws, ensuring seal "D" is in position.